


User's Guide
for the
CRATE PRO AUDIO
SM1-SP
**Studio
Module**
Stereo Effects Processor

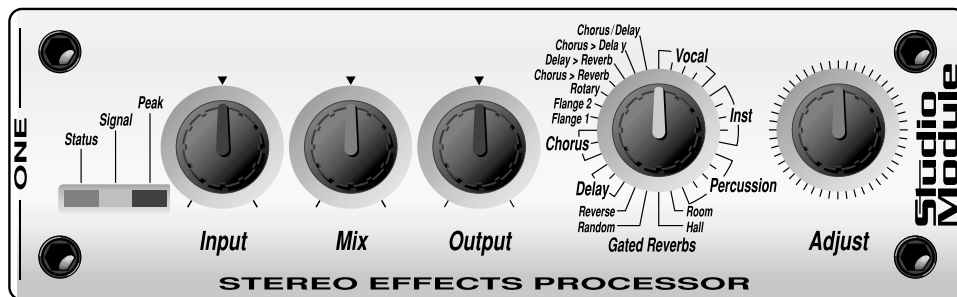

Congratulations!

You now hold a World of Effects in the palm of your hand – Crate's SM1-SP Effects Processor combines simplicity of operation with great sounding, "useable" effects. Compact, rugged and quiet, the SM1-SP is equally at home on the stage, on the road, or in the studio.

In order to achieve maximum performance from your SM1-SP and to better understand and appreciate its flexibility and operation, please read this user's guide prior to its use.

And "Thank You" from









SM1-SP Stereo Effects Processor

Contents:


| | |
|---------------------------------------|------------|
| The Front Panel | 3 |
| The Rear Panel | 3 |
| Basic Connections | |
| Connecting the AC Power Adapter | 4 |
| Signal Input and Output Jacks | 4,5 |
| Program Charts | 6 |
| Adjustable Parameters | 6 |
| Basic Operation | 7 |
| Adjusting an Effect Parameter | 7 |
| Block Diagrams | 7 |
| Features | back cover |
| Technical Specifications | back cover |

| | | | | |
|--|---|--|---|--|
| ATTENTION |  | CAUTION |  | VORSICHT |
| RISQUE D'ELECTROCUTION NE PAS OUVRIR | | RISK OF ELECTRIC SHOCK DO NOT OPEN | | ELEKTRISCHE SCHLAGEGFAHR NICHT OFFENEN |
| ATTENTION: POUR REDUIRE D'ELECTROCUTION NE PAS ENLEVER LE COUVERCLE. AUCUNE PIECE INTERNE N'EST REPARABLE PAR L'UTILISATEUR. POUR TOUTE REPARATION, S'ADRESSER A UN TECHNICIEN QUALIFIE. | | CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | | VORSICHT: ZUR MINIMIERUNG ELEK- TRISCHER SCHLAGEGFAHR NICHT DEN DECKEL ABENHMEN. INTERNE TEILE KÖNNEN NICHT VOM BENUTZER GEWARTET WERDEN. DIE WARTUNG IS QUALIFIZIERTEM WARTUNGSPERSONAL ZU ÜBER- LASSEN. |
| THIS EQUIPMENT HAS BEEN DESIGNED AND ENGINEERED TO PROVIDE SAFE AND RELIABLE OPERATION. IN ORDER TO PROLONG THE LIFE OF THE UNIT AND PREVENT ACCIDENTAL DAMAGES OR INJURY, PLEASE FOLLOW THESE PRECAUTIONARY GUIDELINES: | | | | |
| CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT OPEN CHASSIS. | | | | |
| WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE. | | | | |
| WARNING: AVOID PROLONGED EXPOSURE OF THE EQUIPMENT TO EXTREME HEAT. | | | | |
| CAUTION: NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | | | | |
| EXPLANATION OF GRAPHICAL SYMBOLS: | | | | |
|  | = "DANGEROUS VOLTAGE" "DANGER HAUTE TENSION" "GEFAHLICHE SPANNUNG" |  | = "IT IS NECESSARY FOR THE USER TO REFER TO THE INSTRUCTION MANUAL" "REFERREZ-VOUS AU MANUAL D'UTILISATION" "UNBEDINGT IN DER BEDIENUNGSANLEITUNG NACHSCHLAGEN" | |



SM1-SP Stereo Effects Processor


The Front Panel:

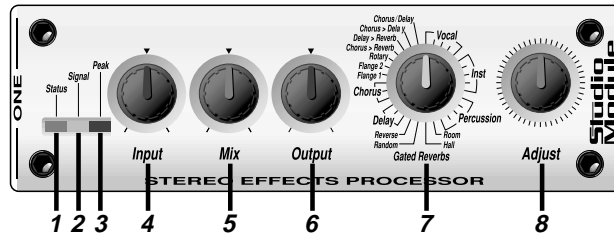

*Please see
page 7 for
additional
information*

- 1: Status LED: Lights when the unit is on and functioning properly.
- 2: Signal LED: Lights when the input signal is within 20dB of the maximum input level.
- 3: Peak LED: Lights when the input signal is within 6dB of clipping.
- 4: Input Level Control: Allows adjustment of the level of the signal going into the processor. For the best signal to noise ratio, adjust this control until the Peak LED flashes on strong signal peaks.
- 5: Mix Control: Allows variation of the amount of effect applied to the overall audio output. Adjust to taste.
- 6: Output Level Control: Allows adjustment of the audio level coming out from the processor. Use this as your master volume control.
- 7: Select Control: Allows selection of effects.
- 8: Adjust Control: Allows changes to be made on one parameter of the selected effect. These changes remain active until another effect is selected.

The Rear Panel:

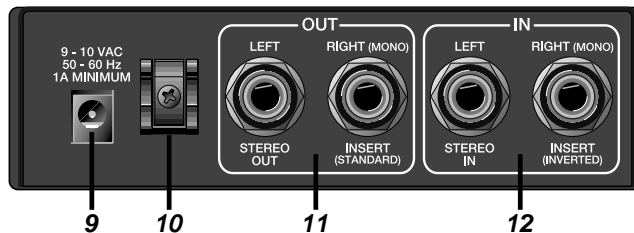

*Please see
pages 4 & 5
for additional
information*

- 9: Power Supply Jack: Plug the small metal barrel connector of the AC power adapter here.
- 10: Cord Cinch: Use this clip to secure the cable of the power pack to the chassis of the unit.
- 11: Output Jacks: These jacks carry the left and right output signals from the unit to their destinations.
- 12: Input Jacks: These jacks receive the input signal(s) into the unit.




SM1-SP Stereo Effects Processor


Basic Connections:

Connecting the AC power pack to the SM1-SP:


NOTE: Since the SM1-SP is "always on" when the power pack is plugged in, it is advised that the user unplug the power pack or turn off the AC source when not using the unit for extended time periods.

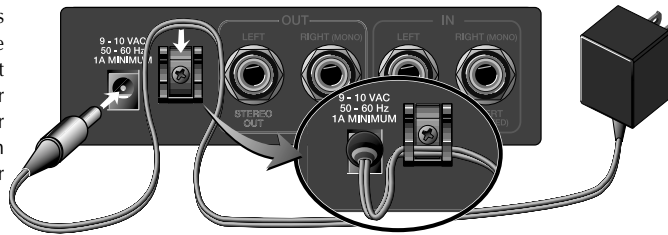

Patching into an amplifier's effects loop:

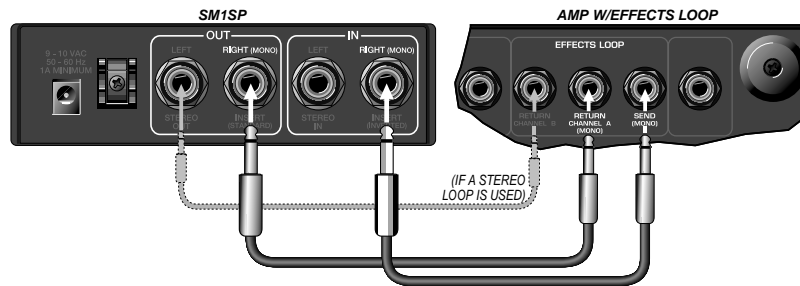

Patching into the insert jack of an amplifier or a mixer channel:

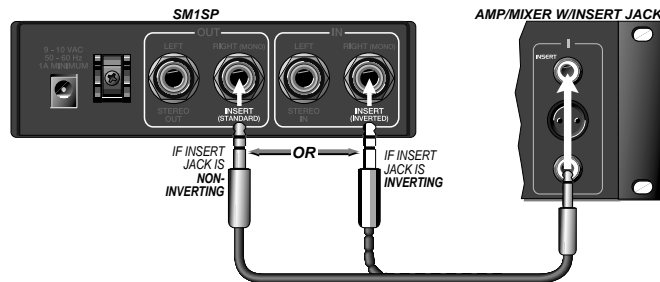





SM1-SP Stereo Effects Processor

Basic Connections, continued:


Patching into a mixer's mono effects loop (Aux In/Aux Out):

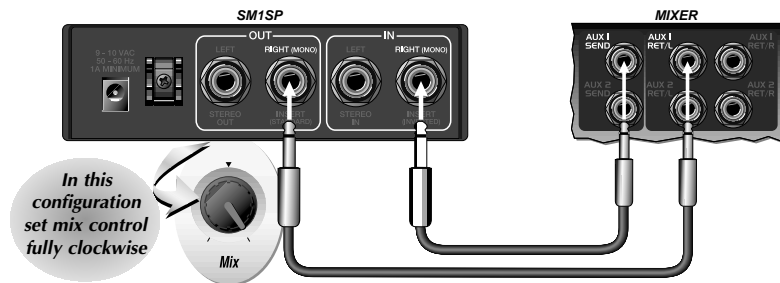

Patching into a mixer's stereo effects loop (Aux In/Aux Out):

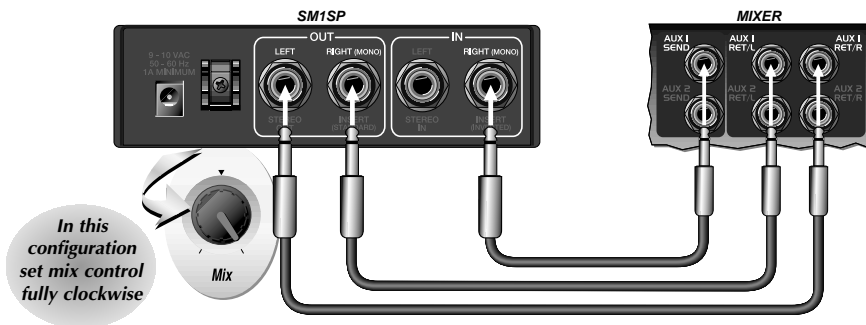

Patching in line with a preamp:

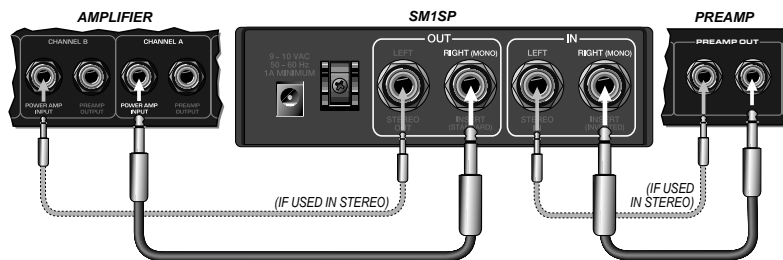



SM1-SP Stereo Effects Processor

Program Charts / Adjustable Parameters:

| Prog.# | Type | Adjustable Parameter | Default |
|--------|---|----------------------|---------|
| 1 | Vocal Reverb 1 – Bright | Decay | Short |
| 2 | Vocal Reverb 2 – Warm,15mS pre-delay | Decay | Medium |
| 3 | Vocal Reverb 3 – Dark, 30mS pre-delay | Decay | Long |
| 4 | Vocal Reverb 4 – Warm w/Low Cut,15mS pre-delay | Decay | Medium |
| 5 | Vocal Reverb 5 – Bright w/Low Cut | Decay | Long |
| 6 | Instrument Reverb 1 – Bright | Decay | Short |
| 7 | Instrument Reverb 2 – Warm,15mS pre-delay | Decay | Medium |
| 8 | Instrument Reverb 3 – Dark, 30mS pre-delay | Decay | Long |
| 9 | Instrument Reverb 4 – Warm w/Low Cut,15mS pre-delay | Decay | Medium |
| 10 | Instrument Reverb 5 – Bright w/Low Cut | Decay | Long |
| 11 | Plate Reverb 1 – Bright | Decay | Short |
| 12 | Plate Reverb 2 – Warm,15mS pre-delay | Decay | Medium |
| 13 | Plate Reverb 3 – Dark, 30mS pre-delay | Decay | Long |
| 14 | Plate Reverb 4 – Warm w/Low Cut,15mS pre-delay | Decay | Medium |
| 15 | Plate Reverb 5 – Bright w/Low Cut | Decay | Long |
| 16 | Gated Room Reverb | Gate | Long |
| 17 | Gated Hall Reverb | Gate | Long |
| 18 | Gated Random Reverb | Gate | Long |
| 19 | Gated Reverse Reverb | Gate | Long |
| 20 | Delay 1 – No Regen | Time | Long |
| 21 | Delay 2 – 25% Regen | Time | Long |
| 22 | Delay 3 – 50% Regen | Time | Long |
| 23 | Chorus 1 – Moderate | Speed | Medium |
| 24 | Chorus 2 – w/43mS Delay | Speed | Medium |
| 25 | Chorus 3 – w/63% Feedback | Speed | Medium |
| 26 | Flange 1 – Moderate | Speed | Medium |
| 27 | Flange 2 – High Q | Speed | Medium |
| 28 | Rotary Speaker | Speed | Medium |
| 29 | Dual-Effect: Chorus --> Reverb | Rvb Decay | Medium |
| 30 | Dual-Effect: Delay --> Reverb | Rvb Decay | Medium |
| 31 | Dual-Effect: Chorus --> Delay | Delay Time | Long |
| 32 | Dual Mono Effects: Chorus / Delay | Delay Time | Long |



SM1-SP Stereo Effects Processor

Basic Operation:


The SM1-SP processor is simple to use. After connecting the unit to your system, plug in the AC power pack. The Status LED (#1) will light (if it fails to light, check the outlet and adapter – if both seem functional, contact the factory for service information). Set up the signal source (instrument, vocal mic) to your normal playing level and adjust the Input level control (#4) until the Signal LED (#2) stays lit and the Peak LED (#3) flashes on strong signals. Adjust the Mix control (#5) to taste (except as noted on page 5) and use the Output control (#6) as your master volume level control.

Adjusting an Effect Parameter:


Rotate the Select control (#7) to the desired effect. (The chart on page 6 characterizes each of the effects.) Use the Adjust control (#8) to change the factory-selected parameter of the selected effect (see the chart on page 6). The changes will remain active until the Select control is rotated to a different effect.

Block Diagrams:


1) Programs 1– 28, single effect:

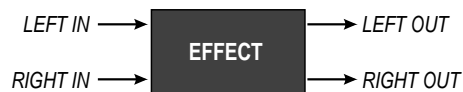

2) Programs 29– 31, dual effect:

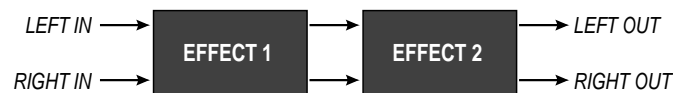

3) Program 32, dual mono effects:

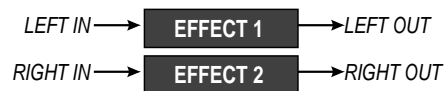



SM1-SP Stereo Effects Processor

Features:

- 32 “real world” effects including reverb, delay, chorus, flange, rotary, and gated reverbs
- Stereo effects, multi-effects and dual mono effects
- 1 easily editable parameter for each effect
- Adjustable input gain, output gain and effect mix
- Independent Status, Signal and Peak LED indicators
- 1 bit Sigma-Delta converters
- Compact 1/3 rack space size
- Rack mountable via universal rack tray (available through your Crate Pro Audio dealer)
- Made with pride in the U.S.A. and backed by Crate’s 5-Year Warranty (U.S. only)

Technical Specifications:

| | |
|---------------------------------|--|
| Frequency Response ¹ | Effect only: 10Hz - 16.4kHz, +1/-3dB Dry signal only: 10Hz - 40kHz, +1/-3dB |
| Dynamic Range ¹ | Effect only: 81dB, A-weighted Dry signal only: >90dB, A-weighted |
| Idle Channel Noise ¹ | Effect only: -81dB, A-weighted Dry signal only: <-90dB, A-weighted |
| Distortion ² | Effect only (@ 1kHz): 0.24%, 20Hz - 20kHz Dry signal only (@ 1kHz): 0.06%, 20Hz - 20kHz |
| Crosstalk ¹ | Dry signal only (@ 1kHz): -70dB, A-weighted |
| Maximum Output Level | 0dBV rms |
| Input Impedance | 50k ohms |
| Output Impedance | 470 ohms |
| Peak Indicator Threshold | 6dB below input clipping |
| Signal Indicator Threshold | 20dB below input clipping |
| Conversion Process | Stereo 1 bit Sigma-Delta w/16 bit resolution & 64X oversampling |
| Processor Throughput | 18.432 million instructions/second |
| Memory Size | 16k x 16 bit |
| Power Supply Requirements | 9-10 VAC, 1A |
| Size and Weight | 1.6" H x 5.6" W x 5.5" D; 1.5 lbs (without power adapter) |

¹Typical measurement, 0dB below digital max. • ²Typical measurement, 6dB below digital max.

Specifications subject to change without notice.



www.crateamps.com

**Studio
Module**



©1999 SLM Electronics, Inc. • A Division of St. Louis Music, Inc.
1400 Ferguson Avenue • St. Louis, MO 63133

47-931-01 • 01/99